

LINE-INTERACTIVE UPS

Uninterruptible Power System

1500VA

USER MANUAL

IMPORTANT SAFETY INSTRUCTIONS

WARNING : (SAVE THESE INSTRUCTIONS) This manual contains important safety instructions. Please follow up all instructions carefully during installation. Read this manual thoroughly before attempting to unpack, install or operate.

CAUTION : To prevent the risk of fire or electric shock, please install the unit in a temperature and humidity controlled indoor area, which is free of conductive contaminants.

CAUTION: Risk of electric shock, do not remove the cover. No user serviceable parts. Refer servicing to qualified service personnel.

CAUTION : Risk of electric shock. Hazardous live parts inside this UPS can be energized from the battery supply even when the input AC power is disconnected.




CAUTION : Risk of electric shock. Battery Circuit is not isolated from AC input, hazardous voltage may exist between battery terminals and ground. Please test it before touching.

NOTICE : The UPS is designed for computer loads only.

1) INSPECTION

Inspect the UPS upon receipt. Notify the carrier and dealer if there is damage. The package is recyclable; save it for reuse or dispose of it properly.

2) PLACEMENT

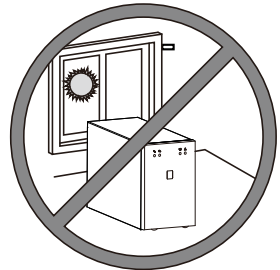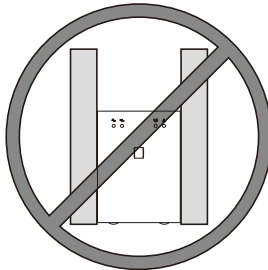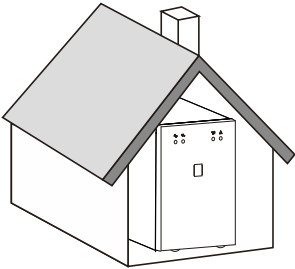


3) OPERATION TEST

1. Connect the UPS to the wall receptacle.
2. Push on the Main Switch to check the Green Line (⌚) LED is on.
3. Connect your computer equipment with sockets of the UPS and pull off the input power cable of the UPS from the wall receptacle to check if the Line (⌚) and Inverter (⌚) LED are flashing every 2 seconds. Meanwhile, please check if alarm buzzer is beeping.
4. Try the field working condition by running some application programs on your computer and repeating step.
5. Check if the UPS is initiated properly to support continuous operation.
6. **IMPORTANT NOTICE:** Plug the UPS into the wall outlet to charge the UPS for over 8 hours before using the UPS.
7. **STORAGE:**
Store at -15 to +30 °C (+5 to +86 °F), charge the UPS battery every six months.

Store at +30 to +45 °C (+86 to +113 °F), charge the UPS battery every three months

6) FRONT PANEL EXPLANATIONS

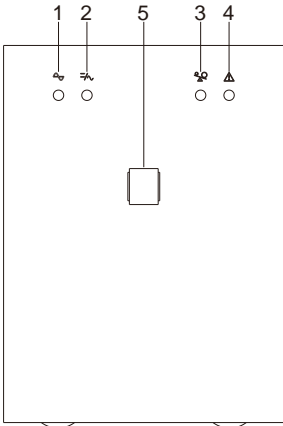

1. Line LED (\sim) :

Green LED remains standstill when Utility is normal.

Green LED flashes every 2 seconds when the UPS is in Battery charging mode.

Green LED remains standstill and simultaneously buzzer alarm is noticed continuously when the UPS is in overload condition.

2. Inverter LED ($\nabla\sim$) :

Yellow LED flashes every 2 seconds and simultaneously buzzer alarm is noticed continuously when Utility failure.

3. Overload LED ($\sim Q$) :

Red LED remains standstill and simultaneously buzzer alarm is noticed continuously when the UPS is in overload condition.

4. Check Battery LED (Δ) :

Red LED flashes every 0.5 seconds and buzzer alarm is noticed every 0.5 seconds when UPS is in battery low condition.

5. Main Switch :


a. To Control on/off the UPS when Utility is normal.

b. To enable "DC-Start" Function when Utility fails. (To enable DC Start properly, you are recommended to connect <80% output load with the UPS only)

P.S. Make sure the computer connected to the UPS is switched on before enable the "DC-Start" function. You are not recommended to add some other computer or peripherals after DC-Start function is activated.

7) REAR PANEL EXPLANATIONS

1. AC Inlet
2. AC Input Fuse
3. Backup Outlets IEC 320

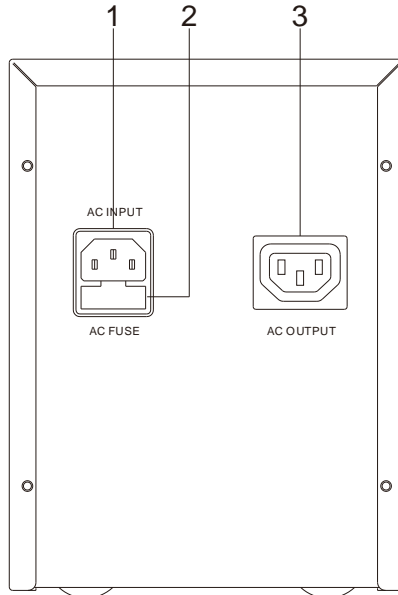

1. Use a cross-type screwdriver to remove the two top cover screws and slide back the cover Please refer to the figures STEP 1 through STEP 4.
2. Gently Pull the batteries out of the UPS.
3. Loosen the black wire from the negative (-) terminal and red wire from the positive (+) terminal.
4. Connect the battery leads to the new batteries.
5. Note: Small sparks at the battery connectors are normal during connection.
6. Slide the batteries into the UPS.
7. Close the front panel and fasten two screws.
8. Dispose of the old batteries properly at an appropriate recycling facility.

9) TROUBLE SHOOTING

When your UPS malfunctions during operation, you may check the list below for proper adjustment. If the adjustment still be in vain, please contact your sales agent for help.		
Situation	Check Items	Solution
Mains normal but 'Line' LED is not on.	<ol style="list-style-type: none"> 1. Is the power switch on? 2. Is the power cord loose? 	<ol style="list-style-type: none"> 1. Press Main Switch on. 2. Change fuse with same rating. 3. Re-connect the power cord properly.
'Inverter' LED flashes every 2 seconds but no output	Battery voltage is too low	Recharge the UPS for 24 hours.
Alarm buzzer beeps continuously when Utility is normal.	Check to see load status if it is in overload.	Remove some uncritical load.
Alarm buzzer beeps for 10 seconds, then the UPS is turned off		Remove some uncritical load and re-switch on the UPS.
No LEDs display on the front panel		Consult with your sales agent For help.
UPS dose not provide expected back up time.	<ol style="list-style-type: none"> 1. The UPS's battery is weak due to recent outage. 2. The UPS's battery is near the end of its service life. 	<ol style="list-style-type: none"> 1. Charge the battery. 2. If the battery is near the end of its service life, consider replacing the battery.
UPS switch on then connect Utility, but UPS is unable to work under Utility mode	Is the Utility normal?	If Utility is normal, connect Utility first then restart UPS.

